

Brush Cleaning Instructions




Glass Washers

Outside Arms
DO NOT DETACH!

Outer Brush
Assembly

Hub Assembly

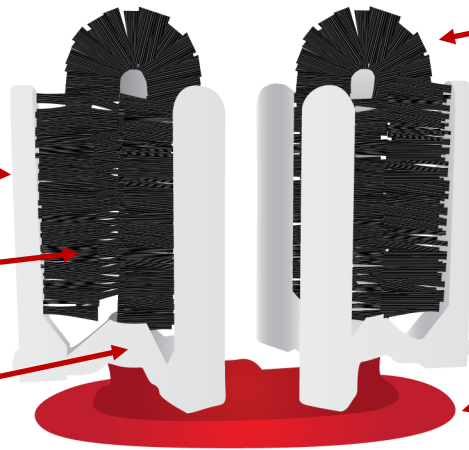

Goblet Brush

Base - NOT
DISHWASHER SAFE!

How do I clean my KissKleen™ Glass Washer?

Very simple! Each brush assembly screws into the base. To unscrew, simply turn the goblet brush counter-clockwise. The goblet brush and outer brush assembly can be washed or placed in a dishwasher. The red base **is not** dishwasher safe. To reassemble, simply insert the goblet brush through the hub assembly and screw back into the base. **NOTE:** the outside arms DO NOT detach from the hub assembly – this will compromise the seal and make the device unusable.



BetterBeer.com®

support@BetterBeer.com
(888) 811-2337

Brush Cleaning Instructions




Glass Washers

Outside Arms
DO NOT DETACH!

Outer Brush
Assembly

Hub Assembly

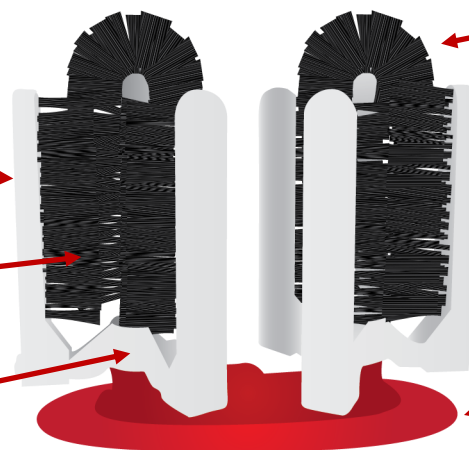

Goblet Brush

Base - NOT
DISHWASHER SAFE!

How do I clean my KissKleen™ Glass Washer?

Very simple! Each brush assembly screws into the base. To unscrew, simply turn the goblet brush counter-clockwise. The goblet brush and outer brush assembly can be washed or placed in a dishwasher. The red base **is not** dishwasher safe. To reassemble, simply insert the goblet brush through the hub assembly and screw back into the base. **NOTE:** the outside arms DO NOT detach from the hub assembly – this will compromise the seal and make the device unusable.



BetterBeer.com®

support@BetterBeer.com
(888) 811-2337